


Bath Door Surround and Canopy Fitting Guide

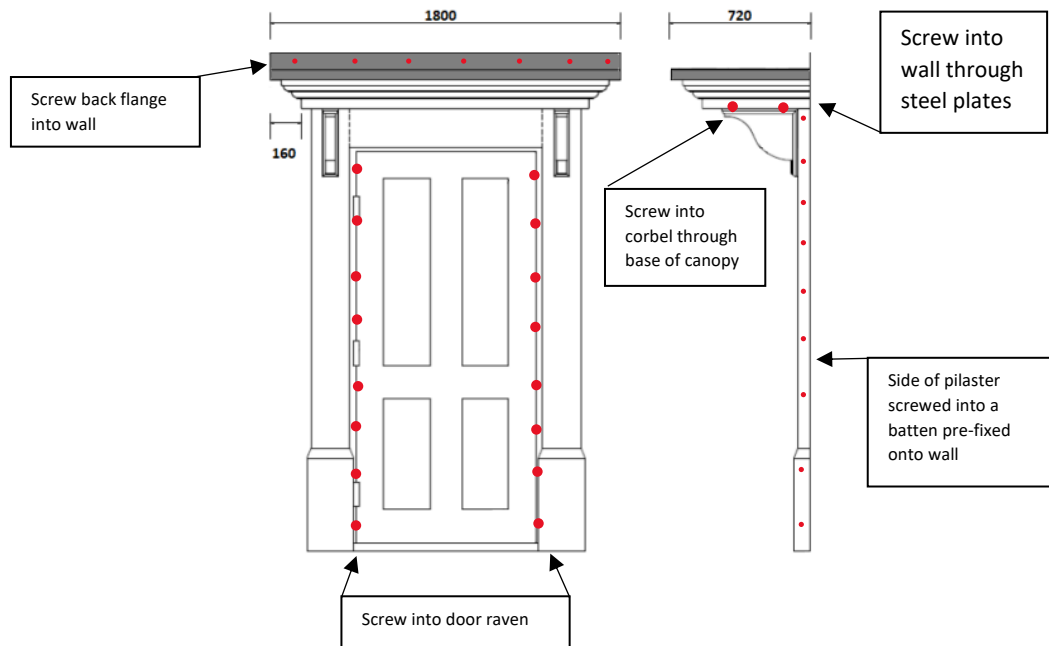

Mark the wall where the pilaster are fitting to the wall and fix a batten into place.

Screw the side of the pilasters into the batten and into the door raven.

Fix a batten top and bottom where the panel is to be fixed then screw into panel.

Screw the base of the canopy to the wall, offer the corbels up to the required area under the base and screw down into the corbels.

Fix the roof onto the base and screw into the wall.

Finally, seal with external silicone where required.