


Flat Canopy (With Corbels)

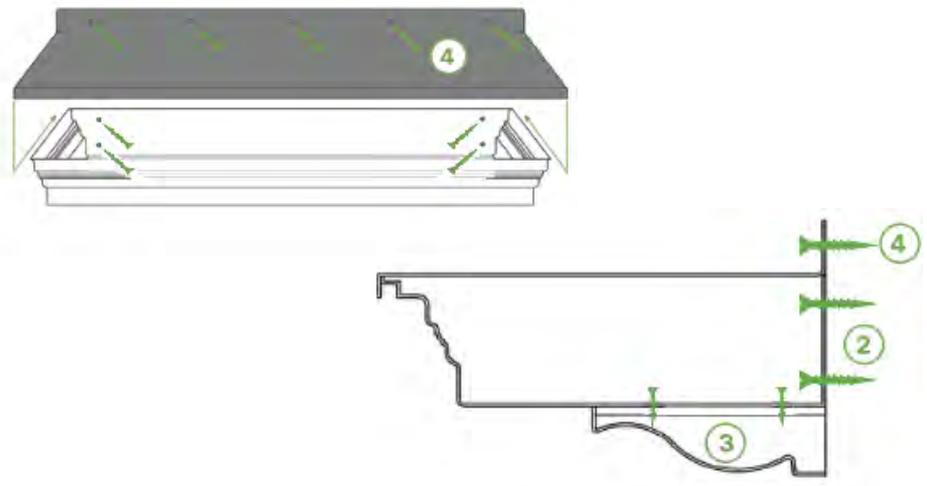

Supplied Fixings:



- 7.5mm x 100mm Concrete Screws
- 5mm x 50mm Woodscrews
- Grey Screw Caps (Hinged)
- Brown Wall Plugs

Not Supplied:



- Various drill bit sizes
- Silicone sealant

Fitting Instruction

Fixings supplied within this pack suitable for solid brickwork and 7kN blockwork. Ensure wall is flat and level **before** fitting the canopy.

- 1 Remove lead-effect roof from canopy base.
- 2 Hold canopy base at desired height over door, centralise and level. Mark, drill and fix through steel arms fixing locations.

 6mm Drill Bit
  7.5mm x 100mm Concrete Screws

- 3 If corbel brackets are supplied (not load bearing – decorative only), position corbels and screw down through timber insert in canopy base.

 5mm x 50mm woodscrews

- 4 Position and slide roof section into position on canopy base. Ideally through brick centres, mark, drill and fix through roof upstand (mimics the lead flashing)

Please Note: The roof upstand is not pre-drilled.

Apply clear silicone sealant to reverse side of upstand prior to fixing to stop the migration of water.

 6mm Drill Bit
  5mm x 50mm woodscrews
 Brown plugs
 Grey screw caps (hinged)

- 5 Apply silicone sealant bead along top of roof upstand
- 6 Clean down canopy if necessary – refer to cleaning and maintenance guide overleaf.